


SMART-CLAMPS™

INSTALLATION INSTRUCTIONS

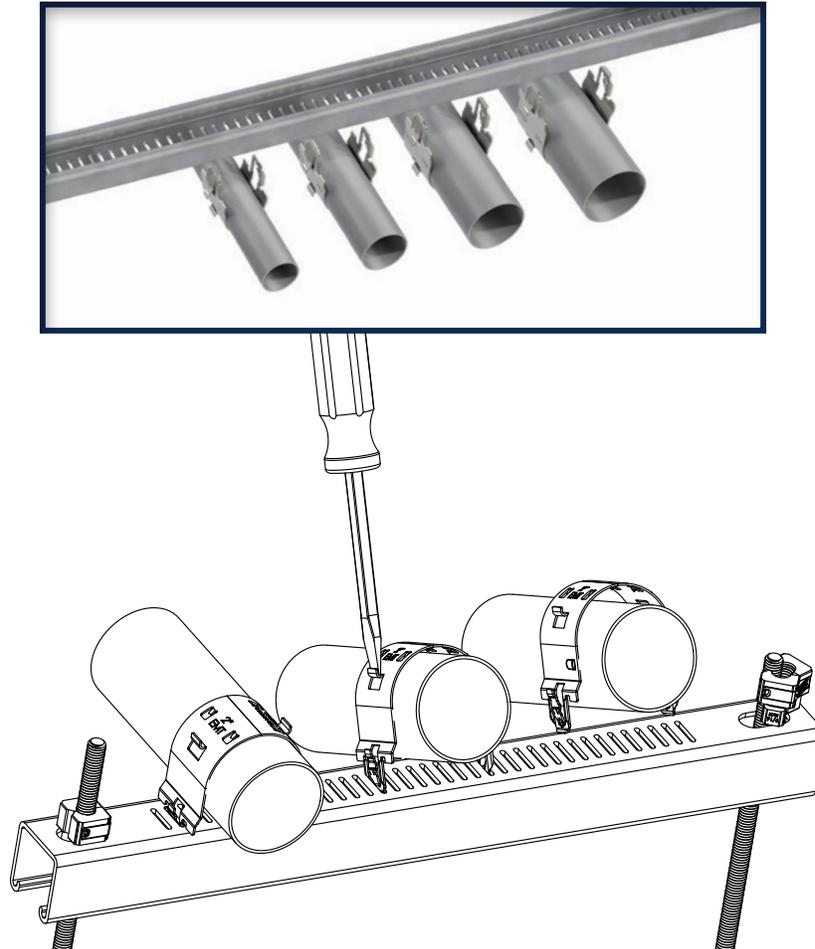

To install, insert the tabs of the Smart-Clamp into the slots

Push down until it clicks in place, use a screwdriver to ensure engagement

To remove, push the locking tabs inward and pull up to disengage

SMART-CLAMPS™

1. Push the locking tabs of the Smart-Clamp into the slots of the Dakota Smart-Strut, Smart-Cap or Slotted Receiver
2. Listen for a double click to know the Smart-Clamp is locked in place
3. Use a flathead screwdriver to tap the notches on the top of the clamp to ensure engagement
4. To remove the Smart-Clamp, squeeze the locking tabs and pull upward to disengage from slots (flathead screwdriver or pliers may be required)