



SMART-RECEIVERS™

INSTALLATION INSTRUCTIONS

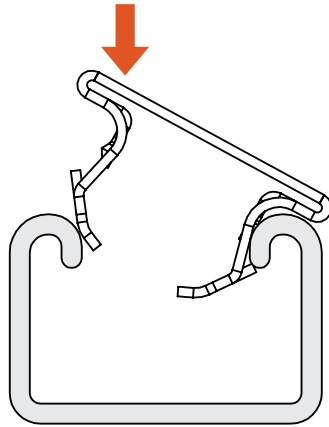

1.

Place one side of the locking tab into strut channel

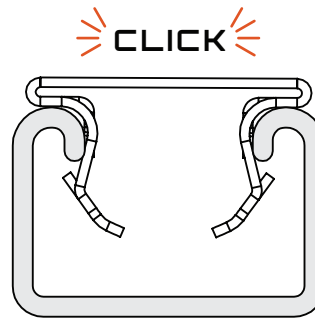

2.

Push down until it clicks in place

Smart-Receivers™

1. Place one side of the locking tab of the Smart-Receiver into the open side of a 13/16" or taller strut channel
2. Push down the opposing side of the Smart-Receiver into the open strut channel
3. Listen for a click to know the Smart-Receiver is locked in place